

# TP-L5 series



### Standard Components

- Pipe Laser TP-L5 ..... 1pc.
- Remote controller RC-200 ..... 1pc.
- Battery BT-53Q (rechargeable battery) .... 1pc.
- Self-centering meter ø200mm ..... 4pcs.
- AC/DC Converter AD-13 ..... 1pc.
- Battery adapter BA-2 ..... 1pc.
- Target ..... 1set
- AAA Manganese battery\*1 ..... 4pcs.
- Carrying case ..... 1pc.
- Instruction manual ..... 1vol

\*1) Batteries included in the package are to confirm the initial operation.  
Please replace the batteries provided with new batteries (alkaline) as soon as possible.

### Optional Accessories



### Trivet Stand Kit Components

- Trivet stand model 3
- Trivet handle model 2 (with Carrying Case)



• Drop Manhole kit model 6



• Trivet stand kit 3



• Tripod adapter model 3



• Extension leg (ø200mm)



• Dry battery holder DB-53



• AC/DC converter AD-13

- Target (Large)
- Scope model 2
- Power cable for 12VDC PC-17
- Over the top target



TP-L5G/BG



TP-L5A/B



SPECIFICATIONS				
	TP-L5G	TP-L5BG	TP-L5A	TP-L5B
<b>Laser</b>				
Light source	Visible laser diode			
Wave length	520nm (Green)		635nm (Red)	
Laser power output	4.5mW			
Laser class	Class 3R			
Laser beam diameter	φ 12mm			
<b>Grade Setting</b>				
Grade setting range	-15 to 40% (-150 to +400 ‰)			
Minimum setting of grade	0.001% (0.01‰)			
Grade setting method	Absolute encoder			
Line control range	16° (approx.)			
<b>Auto Alignment</b>				
Alignment distance	5 ~ 150m	—	5 ~ 150m	—
<b>Self leveling</b>				
Slope direction range	±10%			
Axis direction range	±4°(approx.)			
Horizontal accuracy	±10"			
<b>Operating time</b>				
with Dry batteries	55 hours (approx.) (with 4 x size D Alkaline batteries)		80 hours (approx.) (with 4 x size D Alkaline batteries)	
with Rechargeable batteries	40 hours (approx.)		55 hours (approx.)	
Operating temperature	-20°C to +50°C			
Water resistance	IPX8 (IEC 60529:2001)			
Dimensions	φ 125 x 374mm			
Weight	3.8kg (including BT-53Q)			
<b>Remote Controller, RC-200</b>				
Operating distance	200m (from front side of TP-L5) 25m (from upper side of TP-L5)			
Control functions	Automatic alignment mode (TP-L5G/L5A), Line control, Laser beam mode, Laser beam ON/OFF, Line centering			
Power source	Four AAA size dry batteries			
Operating time	about 8 months (with Alkaline dry batteries) about 4 months (with Manganese dry batteries)			

- Specifications subject to change without notice.  
- Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Topcon is under license.  
- Other trademarks and trade names are those of their respective owners.

Your local Authorized Topcon dealer is:



### TOPCON CORPORATION

75-1 Hasunuma-cho, Itabashi-ku, Tokyo 174-8580, Japan  
Phone: (+81)3-3558-2993 Fax: (+81)3-3960-4214  
www.topcon.co.jp

# TP-L5 series



# TP-L5series

PIPE LASER



### New Green Laser with superior visibility and 4 times longer life

- Auto alignment function to align to the center of target
- IPX8 water protection for any harsh site condition
- Compact carrying case for convenient portability
- 20% longer operating time

# Ultra visible Green Laser equipped !

## Automatic alignment function for easy and secure alignment setting



**Greatly improves efficiency of sewerage pipe laying works**  
 TP-L5 enables easily determining position, direction and grade of sewerage pipe, eliminating needs to install batter board and string line.

**Green Laser with high brightness, visibility and longer life**  
 Topcon has incorporated green laser on pipe laser instruments to Utilize its high brightness and visibility for the human eye. TP-L5 employees a new green laser unit which provides superior Visibility and having 4 times longer life.




### Automatic Alignment system (TP-L5G)

Enables to automatically make an accurate alignment to the center of target plate located at the other end of the pipe, with one touch of button. This eliminates inconvenient adjustment operation in the limited space and results accurate alignment.



### RC-200 Remote Controller


The controller comes with the TP-L5 as standard accessory, which can be used for remotely adjusting alignment beam at the other end of the pipe, and/or to avoid touching and moving TP-L5 in case it should stay at the same position.

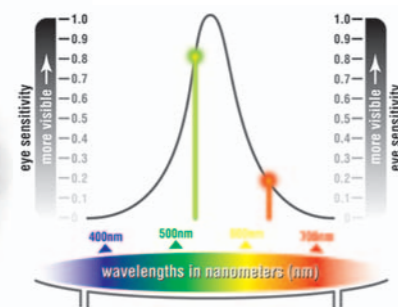

	Green Laser	Centerline LED	Auto Alignment
TP-L5G	○	○	○
TP-L5BG	○	○	○
TP-L5AV		○	○
TP-L5B		○	

# TP-L5 series

**The Highest Durability and Quality !**  
**Tested through severe environmental tests simulating harsh site conditions.**

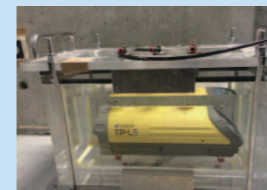


### Water Resistance

Tested by being submerged 24 hours at 5m under water, which far exceeds IPX8 conditions. It can endure even being submerged by a sudden heavy rain.




### Impact Resistance

Tested by dropping from 50cm height to a concrete floor within carrying case. The instrument is well protected even for unexpected drop down at bad footing place.

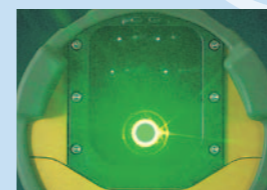

### Green Laser


Using a semiconductor green laser with 4 times extended operation life.

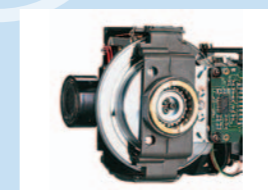

### Highly accurate slope settings


Hired an absolute angle encoder system equivalent to the one on total station to set accurate slope angles with high repeatability.

### PARTS and FUNCTIONS

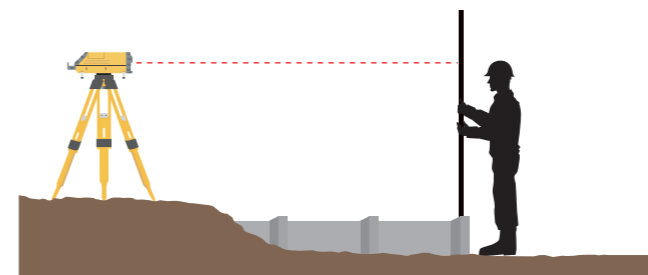


### Over the top

Mount TP-L5 on top a tripod using Tripod Adapter(\*1) To set up in correct direction, the L-Type Scope(\*1) can be used for sighting staff or stake at the other end of pipes.

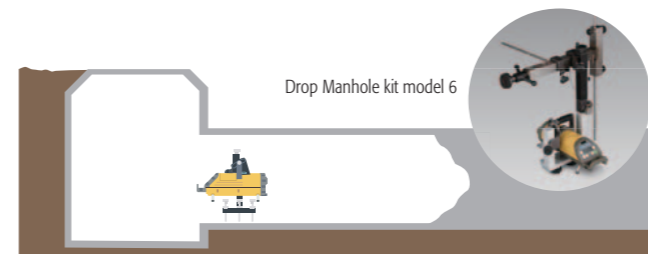


### for Pipes with Medium or Large diameters

Using the optional Trivet Stand, TP-L5 can be located at the center of Medium to Large pipes. For pipes with even larger diameter, the optional Drop Manhole Kit type-6 is also available.

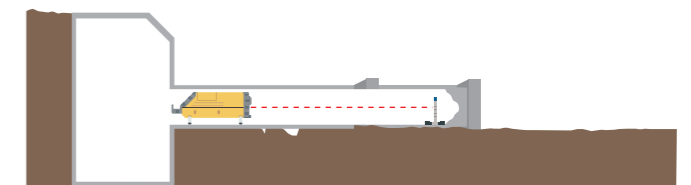

### for Pipes with small diameter

The TP-L5 can be directly inserted inside of pipe with 150mm internal diameter. Depends on the diameter of the pipe, change 4 legs for 200, 250 or 300mm diameter. TP-L5 can be installed at the center of the pipe. (Optional Extension legs for adding 200mm length are also available)

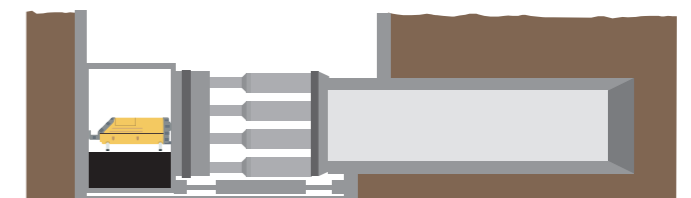

### For Pipe Jacking method/Shield method

TP-L5 can be used also for the Pipe Jacking method. Setting up the TP-L5 in the vertical shaft for machine departure and fix a target plate at the cutting head, displacement of driving direction and grade can be checked and fed back to control of the machine.

\*1: optional accessory